SHS-P717 **USER MANUAL**

Digital Door Lock

Easy push/pull handle acces

Welcome Function

When a user gets close to the door lock. the authorization standby mode will automatically activate.

Silent-Mode Function

When going in or out, the sound of the key entering and door opening will be suspended.

Automatic Card Reading Function When a card touches the reader, the reader will conveniently recognize the card.

Double Authorization Requires card & password combination to ope

Security Assurance Function When someone is inside the house, authorization for entry from the outside will be prohibited.

Built-in Fire Detection Generates alarm in case of a fir


Security Function

Prevents intrusion from the outside



GC68-02023A ED:05

Menu Table

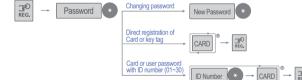





Safety Cautions

This section contains important information to ensure the user's safety and prevent potential damage to property. Please, read Warning this section carefully and use the product accordingly.

- The user shall not install or repair the product without authorization
- Do not install the product in the place where the gap between the door and the frame is 5mm or more.
- Make sure that no unauthorized person has the access to the password.
- Do not operate the product with wet hands, and keep liquids such as water or drinks away from the product, or the product may malfunction or be

damaged.


- Do not use the excessive force or sharp objects to push the lockbuttons, as this can damage the product.
- Make sure that the door is completely closed when going outside. The nanufacturer does not assume the

responsibility for any harm caused by engagement of the lock on an improperly closed door.

- Please do not hang on the product or • Be sure to correctly match the poles (+/-) when installing the batteries. Install
- the batteries with the correct poles (+/-). Replace all batteries immediately after they run out of power and never mix new batteries with used ones.
- Do not use water, benzene or alcohol when cleaning the product, as these fluids can cause product malfunction
- Replace the batteries within 1 week after the battery replacement alarm sounds

Product Components

The product components used may vary depending on the installation

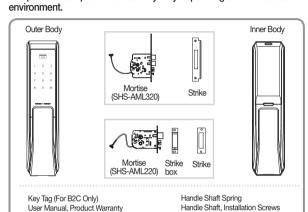

Opening the Door from Outside with a Password


When purchased, the product is set to Multi-leveled Security Code Entry Mode initially. Please refer to "Multi-leveled Security Code Entry Mode setting" for Common Mode setting.

Silent Mode

'AA' Batteries (LR6)

Emergency Key(5EA)

Before entering the password, press the [*] button and enter the password, then both the sound of the key entering and the door opening will be suspended. It is a useful function if you do not want to disturb neighbors when you go in and out at night.

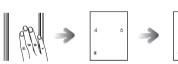

Touching [Number When two arbitrary buttons are lighted Pad] will light up the number pad. press the buttons

When the numbers on the number pad are lighted, enter

((|)))

Success: DING DONG DENG

aii. Ding dong ding

the password and press the [*] button.

Installation Manual(For B2C Only)

- If the security mode is changed as 'common mode', second step will be

word must be entered after the light is on, and if does not, touch [Number Pad] and re-enter.

To cancel, press [1] button and re-enter.

• If the password is wrong 5 times, "peep" warning alarm will sound 20 times and the system will shut-down for about 3 minutes. When malfunction

Opening the Door from Outside with a Card or **Key Tag**

The door can be opened from outside using a card or key tag. Place the registered card or key tag on the card reader.

Placing the Card or Key Tag on the Card Reader



Success: DING DONG DENG DING DONG DING


Place the card or key tag on the card reader. The door will be opened after 1 second.

5


Opening the Door from the Inside

Opening by Pulling the Inner Handle




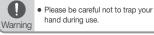


Outer Body Parts

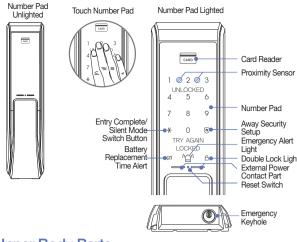

Inner Body Parts

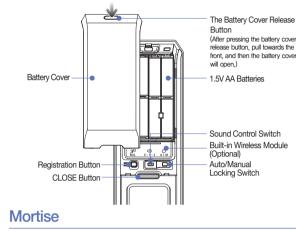

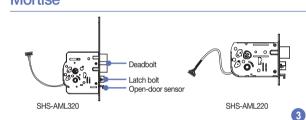

Closing the Door from the Inside

The door is automatically locked 1 seconds after the door is Lockina Settina closed Lockina Settina [Close] button is pressed.

DING DING -

DING DING

Note

2

 To check if the door is locked from the inside, press the security button riefly; the red LED will flash if the door is locked and the blue LED will blink

Initialization (Password, Card, Key Tag)

All registered data (password, card, key tag) are deleted. After initialization, the password is set to '1234', and the registered card, key tag data are erased. Please register a new password after initialization.

30

2. Entering the Numbers for ation (from the outside □())) DING DONG →

Success: DING DONG DENG Fail: DING DONG DING DONG

2. Entering the Current Password

Press and hold the [Register] When the number pad is lighted, enter button for 5 seconds. 4560852580' and then press the [*] button

Password Change

The password can be 4~12 digits number. Only one password can

. Pressing the [Register] Button

())) DING DONG DENG, DING DING

Press the [Register] button briefly. Enter the current password when the number pad is lighted, and press the *l button.

())) DING DONG

3. Entering a New Password (from the outside) ())) DING DING

Enter the new password (4 to 12 digits) and press the [*] button.

To make sure the password has been properly registered, check the new password and close the door.

6

4. Checking New Password

Operation (from the outside)

Manage your password with care so that unauthorized people will not have access to it. Regularly changing your password can reduce the risk of it being leaked.

Card and Key Tag Registration

registered, (Only ISO14443 A Type is available,)

[Card and Kev Tag Registration Without ID number]

())) DING DONG

[Card and user password registration with ID number]

(1))) DING DONG

())) DING DONG

3. Placing the Card or Key Tag on the 4. Confirming Card or Key Tag

registered on the card reader of the outer tag to the card reader on the outer

ID number is given automatically in order of the registration

To register multiple cards or key tags, lightly place another card or key tag

to the card reader within 20 seconds after registering the previous card o

())) DING DONG

1. Pressing the [Register] Button (from the inside)

Open the battery cover of the

[Register] button.

CARD

DENG" sounds

Warning

press [*].

outside)

CARD

Place the card or key tag to be

3. Enter 2 digits ID number

Input ID between 01 and 30, and

4. Placing the Card or Key Tag

Place the card or key tag to be

registered on the card reader or une body. You will know the card or key tag has been registered when "DING DONG

Sound Setting and Releasing

inner body and briefly press the

Card Reader (from the outside)

body. You will know the card or key tag

has been registered when "DING DONG

The sound that is generated when the number buttons are pressed, when the door is locked or when the locked door is unlocked, can be set according to the user's preference. The product is set to generate all sounds at the factory.

tered on the card reader of the outer

7. You will know the card or key tag
body.



Open the battery cover on the inner



Put the [Sound Control] switch on one of [0], [1], or [2], and close the

[0]: Mute [1]: Normal [2]: Loud

body.

Door Lock Time Setup Function

This function sets the time interval between the moment the door open/closed sensor recognizes the door as closed and the moment deadbolt locks the door. It can be prevented the deadbolt jam problem by adjusting the time.



Default: 1 second

Press [Registration] button

Press [51] ~ [59] button, and then press [*] button.

Welcome Function On/Off

The welcome function is a convenient function that automatically activates the authorization standby mode when a user approaches the door, even before touching the number pad.



DING DONG

DING DONG

Open the battery cover and Code Welcome One-minute alarr press [Registration] button

On and Off / Function Description

- Welcome function : The mode will automatically activate the authorization standby mode when a user approaches the door lock. One-minute alarm: When someone remains in frontof the door lock for more than a minute, this mode will sound the tamper prevention alarm.
 - The factory defaults are set with the welcome function on and the alarm function off.
- The working distance of the infrared sensor can differ depending on light conditions and other environments. When the front door is exposed to sur light or constant bright lights it is advised to limit the usage of the sensor Caution

Up to 30 cards, including the key tag and user password, can be

2. Entering the Password

Enter the password when the

the [*] button.

number pad is lighted, and press

CARD

Place the registered card or key

4. Enter new user password

Enter new user password(4 to 12 digits)

CARD

Confirming Card or Key Tag

Place the registered card or key

))) DING DONG DENG

())) DING DONG


DENG DING

 User password is only for the user, so other functions such as registering cards are not available with this password. cards are not available with this pass Warning • One ID has only one password or card

Deleting Registered Cards

You can delete individual or all registered cards.

1. Pressing the [Register] 2. Entering the Current Password

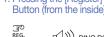





Enter the current password when the number pad is lighted, and press [*] hutton

[Deleting ID information]

(from the outside)

[Deleting Cards] 3. Reading the card to be deleted

Press the [Registration]



If you want to delete all cards data, press [88] + [*] after step 2.

3. Enter ID number to delete

Double Authorization Mode Setting

the door, ensuring more security.

Briefly press the [Register]

button on the inner body.

[Number Pad].

7

())) DING DONG

Two-factor Authentication Mode Operation

())) DING DONG

(I))) DING DONG

Press the [*] button after pressing the

[4] or [6] button, and the authorization

CARD

Touch the card on to the [Card

Reader], if the authentication is

successful, the door will open.

Set the [Automatic/Manual

Locking toggle switch of

the Inner Body to the 'A'/'M'

[4] Button: Double authorization

mode on
[6] Button : Double authorization

DENG, DING DING

Double authorization mode requires both card and password to open

To setup the double authorization mode, more than 1 card must be

(((h

The Automatic Locking mode allows for automatic locking of the door when

 \rightarrow

Automatic: The door is automatically locked 2 seconds after being closed.

- Manual: The door does not lock automatically, and [CLOSE] button must be

pressed from the inside, touch [Number Pad] to close the door.

If the batteries are not replaced after their replacement time comes, they will

As the alkaline batteries offer longer life, they are recommended over

Place the card or key tag on the card reader, or enter the password, while the

If the melody of "Blues for Elise" sounds when opening the door with the

9V battery is connected to the external power port of the outer body.

password or a card (key tag), it is time to replace the batte

(The low battery indicator is lighted when the melody sounds.)

Replace all 8 batteries within a 1 week of the first alarm sound.

The unit will stop operating suddenly if the batteries are not replaced.

Depending on battery manufacturer, date of manufacture and the user environment, the duration of use may vary. (In the case of average use, given as 10 times a day, 8 AA alkaline 1.5Vbatteries can last for 12 months.)

If the poles of the batteries are not placed properly, the lock will not operate

Liquid leaks from batteries can damage the product. Check the batteries

After the battery replacement alarm has sounded, password/card

the number pad is lighted,

and press the [*] button

Automatic/Manual Locking Setting

Open the

battery cover

on the inner

Using the Emergency Battery

be completely discharged and the lock will not operate

Purchase an emergency battery (9V) at the nearest store.

Opening the Door Using an Emergency Battery

the manganese batteries or rechargeable ones.

Replacing the Batteries

Replacing the Battery

10

Battery Replacement Alarm Generation

Success: DING DONG DENG Fail: DING DONG DING DONG

 \Rightarrow

outside body's number pad will light up. Enter 2 digits ID number, then the 2. Press and hold the [1 button on the card or user password of it will be outer body for 3 seconds while the door

Security Assurance Mode Activation/Deactivation

while someone is inside Security Assurance Mode Security Assurance Mode



While the door is locked, press [Security

the door using a password.

U))) DING

Assurance] button on the inner body part for 3 seconds Security Assurance Mode Operation



Outside: Press the [Number Pad] or touch with a card. then the sound for action-unavailable wil



 When the security assurance function is activated, the door cannot be uplocked from the outside so please be careful. Be expecially careful. unlocked from the outside, so please be careful. Be especially careful not to allow children to set this mode accidently from the inside.

Intrusion Detection Function

This function generates the alarm sound when an attempt is made to forcefully open the door from the inside or the outside. (This is a basic function of the lock, and cannot be separately set or

If the door is forcefully opened while locked, the door opening sensor

Alarm Sound (Prank Prevention Function)

This function generates an alarm sound and deactivates lock operation when it is improperly handled from the outside.

card, or if a wrong password is entered five times in a row. The alarm sound is generated, and the lock is deactivated for 3 minutes. While the door is in this inactive mode, a single "DING" sound is generated every 10 seconds and seven consecutive "DINGS" will sound after 3 minutes. Following

Apply the registered card or key tag to the card reader, or enter

Built-in Fire Detection Function

This function generates the alarm sound when fire is detected so that the residence can quickly respond. The built-in fire detection function is a basic function of the lock, and cannot be released by the user Fire detection function is operational at about 75 $^{\circ}$ C ± 10 $^{\circ}$ C: this can

[Close] button while generating the alarm sound. The door is automatically opened after the alarm sound has stopped. (The lock resumes normal operation if the inside temperature returns to

a normal level.) The built-in fire detection function is activated when the temperature rises around 60°C, which may differ depending on the installation environment.

Item	Specifications		
Voltage	AA Alkaline 1.5 Batteries (LR6) 4EA or 8EA (6V)		
Emergency Power Source	9V Battery (6LF22) (Separately sold)		
Operation Method	Electronic Control Method (Password entry or card or key tag reading)		
Weight	3.9 kg (including both inner and outer bodies)		
Product Dimensions	Outer Body (including the handle)	85mm(W) × 346.5mm(H) × 61mm(D)	
	Inner Body	00(1) 00(1) 00(1)	

(including the handle) 86mm(W) • The contents of this user guide are subject to change without prior

Code Entry Mode [9] Button : Common Mode

())) DING DONG

[7] Button: Multi-leveled Security


Briefly press the [Register] Press the [*] button after pressing the [7] or [9] button, and the security mode will be se

Setting the Security Function

Multi-leveled Security Code Entry Mode Setting

You can set the security mode suitable for your use when you open

This is a function to prevent any intrusion while you are out. Should the door be opened from the inside while the intrusion prevention

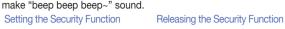

function is on, the emergency alert light will flash and the alarm will




CARD Apply the registered card or key tag to

At-home security mode is to prevent opening of the door from outside



DING DONG DENG DONG Pull the inner body nandle to open the door, and it will deactivate

Rapid beeping

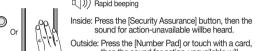



detects it and generates the alarm sound.

This alarm will sound if an attempt is made to open the door with an invalid

this, the lock is released from inactive mode.)

Releasing the Alarm Inside Press the [Register] button.

Outside the password and then press the [*] button.

vary depending on the installation environment. When fire occurs, the temperature sensor detects it and flashes the

Product Specifications

		Voltage	AA Alkaline 1.5 Batteries (LR6) 4EA or 8EA (6V)			
		Emergency Power Source	9V Battery (6LF22) (Separately sold)			
		Operation Method	Electronic Control Method (Password entry or card or key tag reading)			
		Weight	3.9 kg (including both inner and outer bodies)			
•	Product Dimensions	Outer Body (including the handle)	85mm(W) × 346.5mm(H) × 61mm(D)			
		Inner Body	86mm(W) × 354 8mm(H) × 63 mm(D)			

information cannot be registered, changed, deleted, initialized or configured until the batteries are replaced. notice to the user in order to enhance performance of the product. 1

SHS-P717

Digital Door Lock

USER MANUAL

便利的开门方式 便捷的Push Pull开门方式 用户接近门锁时自动转为工作状态 礼仪功能 输入时可转为静音状态 房卡自动识别功能 房卡接触实现自动识别, 简单方便 双重认证功能

用户居家时,将切断外部识别功能

卡和密码的双重认证功能


室内安心功能

火灾感应功能

外出时启动防盗功能

内装火灾感应器

防盗功能

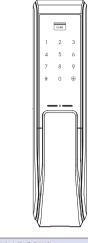

有毒有害物质或元素					
Pb	Hg	Cd	Cr(VI)	PBB	PBDE
0	0	0	X	0	0
X	0	0	0	0	0
0	0	0	0	0	0
0	0	0	0	0	0
0	0	0	0	0	0
	0 X 0	Pb Hg 0 0 X 0 0 0 0 0	Pb Hg Cd O O O X O O O O O O O O	Pb Hg Cd Cr(VI) O O O X X O O O O O O O O O O O	Pb Hg Cd Cr(VI) PBB O O O X O X O O O O O O O O O O O O O O

: 配件中有毒有害物质含量不超过<含量限制标准GB/T 26572>所规定的标准值 X: 配件中有毒有害物质含量超过<含量限制标准GB/T 26572>所规定的标准值 上述表说明本产品所含的有害物质含量信息。配件别有害物质信息是根据合作公司所提供的信息和内部鉴定结果来制成的。部分配件所含的有害物质,按照现在的技术水准是很难代替,为了代替这个问题三星SDS(三星數据系統)会竭尽全力去努力的。

www.samsungsds-nss.com/en

为保证用户安全,避免给用户带来财产损失及使用不便,请务必 仔细阅读以下内容后正确使用本产品。

- 禁止用户任意安装或修理本产品。
- 禁止用力下坠或用力拉本产品。
- 过5mm。

安全注意事项

- 电池寿命已尽时,请同时更换所有的电 • 请小心管理密码,并定期更换密码,
- 以免他人知道。
- 禁止用湿手操作本产品,防止水、饮料 请使用柔软的布清洁锁体,禁止使用 等液体进入锁体内部。 水、苤、洒精擦拭太产品。
- 禁止过度用力或用尖锐的器具按由子 锁的按键。
- 外出时请务必确认门是否完全上锁。

• 安装时,门与门框之间的间距不能超 请按照电池下负极 (+/-), 下确安装




• 产生由油更换警报音后, 请条必在一周 之内及时更换新电池。


池,禁止新旧电池混合使用。

使用前须知


因安装的环境不同,产品零部件会有差异。

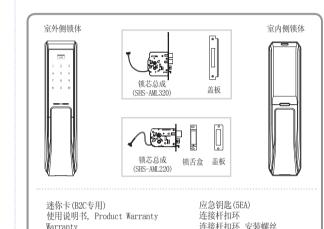

室外锁体名称

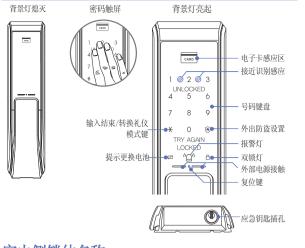

室内侧锁体名称

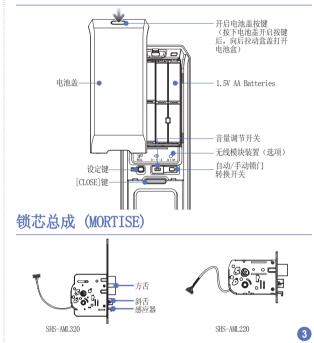

关门1 秒后自动上锁。

CLOSE

亮红灯提示,如门未上锁,亮蓝灯提示。

初始化方法(密码、电子卡、迷你卡)

动设定为"1234",电子卡、迷你卡的信息自动删除。

□())) DING DONG→

DING DING→

DING DING

• 如果想在室内检查锁门状态,轻按放心按钮,如果门已上锁,

初始化会删除已设定的所有信息。设定的信息初始化之后,密码自

2. 输入初始化号码(从室外)

8 9 - 成功: DING DONG DENG

入"4560852580",再按下[★]键即可。

失败: DING DONG DING DONG

² 3 (1))

号码键盘的背光灯亮起后输

2. 输入密码(从室外)

按[CLOSE]键进行锁门。

删除门卡

• 注意管理密码,别泄漏给他人,一组密码不宜使用过长时间。

2. 输入密码(从室外)

(()))

DING DING

输入率码(当前率码)后按[★]键

4. 接触卡、Key Tag (从室外)

CARD

注册过的卡、Key Tag放在感应区

u()))

输入(4~12位数)的密码按下[*]键

5. 接触卡、Key Tag (从室外)

CARD

注册过的卡、Key Tag放在感应区

DING DONG DENG

1~5秒内锁会开启。

4. 输入新用户密码

• 想注册多张开门卡时,注册好第一张卡后在20秒内一次将剩余

的卡放到感应区,如操作过程中间隔20秒以上会自动终止

DING DONG DENG,

注册卡、Key Tag

1. 按[设定]键 (从室内)

打开电池盖按一下[设定]键

[注册卡、Key Tag]

CARD

可注册的密码和卡数量达到30个。

(()))

3. 接触卡、Key Tag (从室外)

将要注册的卡、Key Tag放到感应区,

随"DING DONG DENG"的声音完成注册。

Warning • 登入用ID 号码为随机号码

((|))

输入01~30以内的ID 号码按下[*] 键。

4. 接触卡、Key Tag (从室外)

将要注册的卡、Key Tag放到感应区,

CARD

DING DONG

(()))

Varning • 一个 ID 只能标记一个密码或者卡。

DING DONG DENG

随 "DING DONG DENG"的声音完成注册。 1~5秒内锁会开启。

• 使用者密码是仅针对使用者而设定的密码

使用者密码不能用于卡注册或者其他类似的功能

[通过ID号码进行卡和密码的注册]

3. 输入 2位数的ID号码

(()))

DING DONG

可以个别删除已经或全部登记门卡。

1. 按[设定]键(从室内)

2. 输入密码(从室外)



DING DONG DENG, DING DING

按[设定]键3秒。

按键板亮灯后输入当前管理密码 按下[*]按键

3. 输入需要删除的 ID号码

[删除ID 信息]

[删除门卡]

3. 将要删除的卡进行接触



DING DONG DENG

需要删除所有卡时,完成第2阶段操作 后按下[88]+[*]

DING DONG DENG

双重认证模式

触摸号码键

设定防盗功能

同时持续5分钟鸣笛报警。

设置室内安心模式

CLOSE

在房门上锁的情况下,在室内一侧

按住[安心]按键持续3秒。

使用室内安心模式

CLOSE

8

盘外。

鸣笛报警

设定防盗功能

成功:DING DONG DENG 失败:DING DONG DING DONG

号码键盘的背光灯全部亮 [卡识别部分]用房卡接触

解除防盗功能

下[*]键。

取消室内安心模式

将设定的电子卡、迷你卡置于

感应区或者输入密码, 然后按

(()))

在室内一侧拉动 把手

打开房门,安心模式自

动解除。

室内: 按[安心]键,门锁发出警提示音。

室外: 触摸[数字键盘]或刷卡时门锁发出

DING DONG DENG DONG

-

在用户外出时防止外部入侵的功能,室内设置后,意外情况发生时

在设置防盗功能的情况下,如房门从内部被打开,警报灯将闪烁,

室内安心模式,户主在家时防止他人从外部开启房门时使用。

起时,输入密码后按下

[*] 键即可。

DING DONG

室内安心模式设定/取消

DING DONG DENG

CARD

自动开启。

刷卡器,刷卡成功后房门

DING DONG DENG DONG 生版・

CARD

输入要删除的卡或者使用密码的2位数 ID号码

设定双重安全模式

使用密码开门时,可根据适用性设定认证模式。







DING DONG DENG [7] 键:双重安全模式 [9] 键: 普通模式

短按室内侧锁体的[设定]键。

按下[7]或[9]键后,按下[*]键即可设 定认证模式。

设定双重认证模式

双重认证模式是指开门时,需同时认证密码和卡的安全强化功能。



(())) 4 5 6 DING DONG DENG 8 9

短按室内侧锁体的[设定]键。

按下[4]或[6]号键,再按下[*]键,

根据使用需要,可以设定或解除该模式



[4]号:设定双重认证模式 [6]号:解除双重认证模式

即可设定解除认证模式。

锁门]转换开关

将室内侧锁体的[自动/手动

'AA'电池(LR6)

Menu Table







其他功能



从室外开门(密码)

初始设置为双重安全模式,如果想设置为一般模式的话,请参考普 通模式设定方法

安装菜单(B2C专用)

2

从室内关门

设定自动锁门

设定手动锁门

1. 按[设定]键(从室内)

持续按[设定]键5秒钟。

更改密码

注册密码。

※ 礼仪模式

输密码前,先按[*]键再输入密码,门锁将不发出"插入钥匙"。 "己开门"等提示音。 夜间出入静音功能



任章2 个键的背光灯亮起 **钟** 位号码键盘外, 号码键盘的背光灯全部亮起时, 号码键盘的背光灯 时,按顺序按下亮起背光灯 输入密码后按下[*]键即可。 的2 个数字。

- 设置为"普通模式"时,只需直接输入密码即可。

● 应在号码键盘背光灯亮起时输入密码: 背光灯熄灭时, 请触摸 号码键盘处,背景灯亮起时重新输入。

同时电子锁会自动停止工作3分钟。电子锁在停止工作状态下,每隔10 秒钟发出"beep"的声音。

分钟之后电子锁会发出"哔哔哔哔哔哔哔"的声音并自动

从室外开门(电子卡、迷你卡)

从室外使用电子卡或迷你卡即可开门。请将已设定的电子卡、迷你 卡正确地置于电子卡感应区。

接触卡、Key Tag




((|)) 成功: DING DONG DENG DING DONG DING

将电子卡或迷你卡置于电子卡感应区 稍候1 秒钟门即会打开。

从室内开门



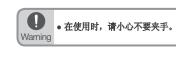



密码可注册4~12位的一组,可注册一个密码,初始化操作后请重新

短暂的按下设定按钮。 3. 输入新密码(从室外)








设定及解除声音模式

本产品可以设定按号码键盘、开门或关门时的声音。



打开室内侧锁

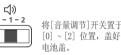

[0]: 无音 [1]: 普通 [2]: 大声

设置关门时间功能

门敞开时,设置门栓上锁时间的功能。 当门徐徐关上时,门栓易被卡住,设置门栓弹出时间将可能改善上 述不便现象。自动上锁时间可以调整。



□())) DING DONG



短暂按下[设定] 按键。

按[51]~[59]键后,按[*]键。

迎宾功能设定/解除

迎宾功能指在用户接近门锁时,即使未接触到密码触屏,门锁也会 自动转入工作认证形态的一种便利功能



按键。

6






(()))

功能设定解除/功能说明

欢迎煤式: 当用户接近电锁时, 自动进入认证状态。 1分钟报警功能: 感应到有人在电锁前超过1分钟后触发警报。

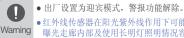

• 红外线传感器在阳光紫外线作用下可能导致距离功能发生改变。 曝光走廊内部及使用长明灯照明情况容易误导警报发生,

设定自动/手动锁门

本产品可设定关门时自动锁门的功能。



打开室内侧销 体电池盖。

的[号码输入]键方可锁门。

 \Leftrightarrow

自动模式: 关门1 秒后自动上锁。但电池没电时不可正常工作。 手动模式: 关门后不会自动锁门, 需按下室内侧锁体的[CLOSE]键室外侧锁体

更换电池

更换电池的提示音响起时.

使用密码或电子卡(迷你卡)开门响起"致爱丽丝"旋律时,开门后需更换 电池。(若更换电池的提示音响起,号码键盘右下侧的电池交换提示背光灯

更换电池

从第一次响起更换电池的提示音后,一周内必须将旧电池全部更换成新电池



由池因生产厂家、生产日期、使用环境不同,使用时间存在差异。 (AA型号1.5福电池8只,按每日开关门10次标准计算,可使用 12个日)

• 更换电池的警示音响后,不更换电池继续使用时,可能会产生 电子锁突然停止工作的情况 电池液体泄漏时会损坏锁体,请务必定期(约6个月间隔)进行

• 更换电池的提示音响后,在更换新电池之前,无法执行密码/ 感应钥匙信息的设定、更改、初始化和功能设定等。

应急电池的使用方法

到了电池更换日期不更换继续使用时,电池会没电导致门锁不能 正常工作。

使用备用电池开门

10

请到附近的便利店或超市购买应急电池(9V)。 建议使用比普通电池和充电电池工作寿命长、可长期使用的碱性电池。



室外侧锁体的外部电源(应急电池)接口接入9V电池,此时使用电子卡 或迷你卡开锁,或者输入密码开锁。

发出警报音时(防恶作剧功能)

在室外操作电子锁不正确时,电子锁有发出警报音并自动进入断电

• 室内安心模式下,房门无法从室外打开,请小心使用

应特别注意请勿让儿童在室内设置此模式。

使用未设定的卡或密码输入错误超过5次时 使用水板层的 光线电码 机光线电码机 (电子锁定设置) 电子锁在停止工作状态下,每隔10 秒钟发出"IDING"的声音。3 分钟之后电子锁会发出"DINGS"的声音并自

u())) 蜂鸣音

警报音的解除方法

从室内 按下室内侧锁体的[CLOSE]键或[设定]键,或者把手向下拉即可

从室外 将设定的电子卡、迷你卡置于感应区或者输入密码,然后按下

入侵感知功能

在室内或室外,强制打开门时发出警报音的功能。 (此功能为产品基本功能,不可设定/删除。) 在门上锁的情况下强制开门时,电子锁的感应器会感知, 电子锁会发出警报音。

火灾感知功能

发生火灾时电子锁会发出警报,告知住户赶快躲避的功能。 (火灾探测功能为基本设定的功能,用户不可随意解除。) 温度升至75℃±10℃时自动开启火灾报警功能,根据环境设置不同

火灾发生时,温度探测器会感知,然后[CLOSE]键不停闪烁,同时电子锁发出警报音 警报音结束后门会自动打开。 (室内温度下降到一定程度后,电子锁会恢复正常工作。)

火灾感知功能在室内温度达到60℃ 左右时启动,安装环境不同会多少有差异。

产品规格

可能略有差异。

项目	规格			
正常电源	AA型1.5 V 碱性电池(LR6) 8 节(6 V)			
应急电源	9 V电池(6LF22) 1节(单独购买)			
工作方式	电子控制方式 (输入密码或电子卡、迷你卡)			
重量	3.9 kg (包括室内侧和室外侧)			
产品大小	室外侧 (包含把手) 85mm(W) × 346.5mm(H) × 61mm(D)			
	室内侧 (包含把手) 86mm(W) × 354.8mm(H) × 63 mm(D)			

12

容作出更改。 1

• 为提高产品的功能, 生产商可不经过用户的同意对使用说明书的内